

# RELAY MOUNTING BASE RRB

## Smoke Alarm Relay Mounting Base

### INSTALLATION INSTRUCTIONS



#### PLEASE NOTE:

READ ALL INSTRUCTIONS BEFORE INSTALLATION. NO USER SERVICEABLE PARTS INSIDE THIS SMOKE ALARM.

#### Specifications:

Main Power Source	220-240V a.c., 50 Hz
Operating Current	≤40 mA
Temperature Range	0 °C to 45 °C
Humidity Range	5% to 95%
Terminals	Active, Neutral, E-Loop and Interconnect terminals
Hard-wire interconnect	40pcs smoke alarm in 150meters

#### Relay

Relay Contacts:	NO / COM / NC contacts (voltage-free)
Remote Input:	250 VAC, 2A

Red Smoke Alarm RRB is a relay base, not a smoke alarm. The RRB Smoke Alarm Relay Mounting Base is designed for use with R240 and R240RC smoke alarms.

- Not compatible with 3rd party products, systems or fire panels.
- Not compatible with model R10 and R9.

#### Before Installing:


- Ensure there are no obstructions in mounting surface, such as pipes or cables.
- Use minimum cable width 1.0mm for all wiring, including interconnect wiring.
- Do not attach to damp nor freshly painted surfaces, nor to electrically conductive (e.g. metallic surfaces.)
- Smoke alarms must be mounted at least 300 mm from light fittings or other obstructions

### ⚠ IMPORTANT

#### EQUIPMENT INSTALLATION HAZARD

- Only install indoors.
- All interconnected smoke alarms (max 40) must be supplied from the same interconnection. A common Neutral must be used for the interconnect to operate.
- DO NOT connect the interconnect wire to Active or Neutral.



**WARNING:** Failure to follow these instructions may result in equipment damage or injury.

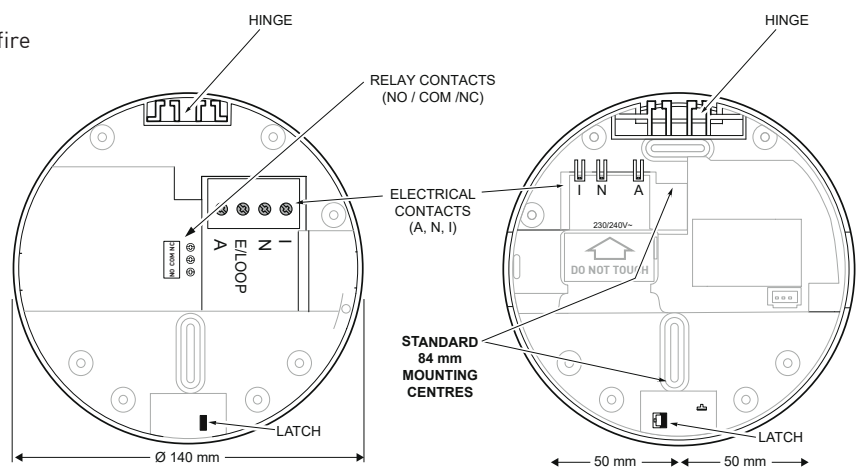

#### Installation & Interconnecting Smoke Alarms:

1. Strip the Active/Neutral and Interconnect (if used) wires back to the strip length shown in below.
  2. Connect the wires to the correct terminals on the base and ensure the terminal screws are fully tightened.
  3. Screw the mounting base onto the ceiling or wall using plugs and screws.
  4. Clip the smoke alarm on to the base and install the 9V battery. The smoke alarm will not latch to the base unless battery is installed.
  5. Turn on the mains power and check that the green and red LEDs function. The Green LED should illuminate to show mains power present. The Red LED will pulse every 40-60 seconds to indicate correct operation and that the 9V battery is charged.
  6. Press the Test/Hush button for 3 seconds to check the alarm works.
- Installation is not complete until both LEDs are functioning correctly.

Use a minimum of 1.0 mm<sup>2</sup> 250V insulated wire for all wiring, including interconnecting wiring.

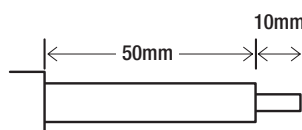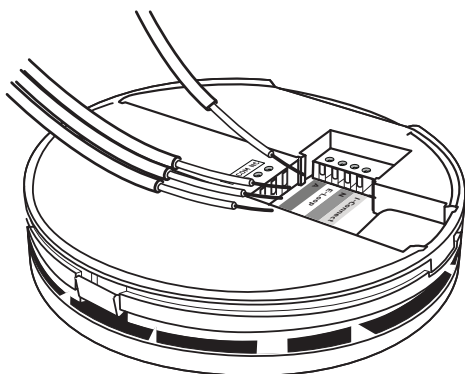

### ⚠ IMPORTANT

#### EQUIPMENT INSTALLATION HAZARD

- All interconnected smoke alarms must be supplied from the same circuit.
- A common Neutral must be used for the Interconnect to operate.
- DO NOT connect the Interconnect wire to Active or Neutral.
- Maximum of 40 interconnected smoke alarms.
- Only Red smoke alarms can be interconnected.

**WARNING:** Failure to follow these instructions may result in equipment damage or injury.

### ⚠ CAUTION

- Red LED flashes very quickly (3 times per second) without sound. That means neutral connection is bad or wiring is incorrect.
- Please check wiring and connection of smoke alarms with flashing red LED and rectify wiring issue immediately.

#### TERMINAL

<b>A:</b>	Active / Line
<b>E/LOOP:</b>	Earth or Loop
<b>N:</b>	Neutral
<b>I:</b>	Interconnect

#### NOTICE - EQUIPMENT INSTALLATION COMPLIANCE

This smoke alarm must be installed in accordance with Australian Code and standards and any local state legislation requirements. Failure to follow these instructions may result in a non-compliant installation.

